# frogblue

### **EN** | Operating instructions

# frogblue Relay

# frogRelay2-2

R2-2-1200.01

# 2-channel relay switch

### Intended use

Multifunctional 2-channel relay switch for blind/shutter control or other electrical appliances with 2 inputs to monitor buttons and switches (110-240 V~).

With comfort and timer functions, power measurement and overcurrent detection. (Total 1200 W @ 230 V~).

For installation in flush-mounted box according to DIN 49073. (For installation behind a switch insert a flush-mounted box depth of minimum 53 mm is necessary, otherwise single mounting is required).

# Safety information

Electrical equipment may only be installed and fitted by qualified electricians.

Failure to observe the instructions may cause damage to the device and result in fire and other hazards!

Danger of electric shock. Device is not suitable for disconnection from supply voltage. Even when the device is turned off, the load is not electrically isolated from the mains.


Danger of electric shock. Before starting work on the device or replacing light sources, disconnect the power supply and switch off the circuit breakers.

When using the load outputs simultaneously, the total load of 1200 W must not be exceeded.

Country-specific regulations must be observed.

These instructions are an integral part of the product and must remain with the end customer.

# **Device setup**

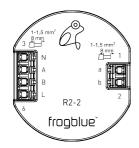

- L/N: Mains supply connection
- Load output 1 Δ٠
- B: Load output 2
- a: Input 1
- b: Input 2

# Function

#### System information

This device is a product of the frogblue system. Detailed technical expertise obtained through frogblue training sessions is required.

The functionality of the device depends on the software. Detailed information regarding software versions and the respective range of functions can be found on the frogblue website.

Technical descriptions. further detailed instructions and information for proper disposal are available in the manual on the frogblue website at all times.

Commissioning and configuration are performed using the frogblue app.

#### **Product characteristics:**

- Temperature shutoff (>75 °C)
- Feedback of the switching state
- Programmable switching behaviour -
- Switch-on and switch-off delay
- Outputs are interlocked with each other in motor mode (configuration is performed using the frogblue app)
- Power supply via mains power cable, no additional cabling required between frogblue modules

# Information for qualified electricians


# Fitting and electrical connection

/!∖ DANGER! Electric shock if live parts are touched.

Electric shocks can be fatal.

Before working on the device, disconnect the power supply and cover live parts in the working environment.

### Connecting and installing the device

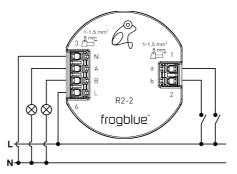

#### Stripping length




Ø 1 ... 1,5 mm<sup>2</sup>; rigid conductors recommended

#### **Connecting wires**





#### **Disconnecting wires**

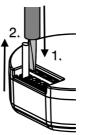

push and hold release button with screwdriver (size 3) pull wire

repeat the process with each wire

#### Factory default input function

Input		Output	
а	brief activation	Α	toggle
b	brief activation	В	toggle

1.

2.

Outputs are interlocked with each other (motor mode). Editable using the frogblue app.

#### **Technical data**

Rated voltage Mains frequency	AC 110-240 V~ 50 / 60 Hz
Bluetooth	Bluetooth 4.2 Low Energy
Frequency range	2400 MHz – 2483.5 MHz, max. 2.9 dBm
Inputs	2, 110-240 V~
Ambient temperatu Storage/transport t	
Outputs	2; 110-240 V~
Contact type	μ, closing contact
Suitable loads	Incandescent lamp load Inductive load Capacitive load Electronic transformers
Connection load	
Incandescent lamp	, 1200 W total (220-240 V~) 600 W total (110-219 V~)
HV halogen lamp,	1200 W total (220-240 V~) 600 W total (110-219 V~)
Capacitive load Electronic transformers	max. 6 A total (110-240 V~) 600 VA / output (220-240 V~) 300 VA / output (110-219 V~)

**Dimensions (LxWxH)** 48 x 53 x 21 mm Connection type Spring plug-in terminal Mains cable core diameter 1 ... 1.5 mm<sup>2</sup>

Technical changes reserved.

# Warranty

The warranty is subject to the statutory provisions relating to the specialist retailer.

# **Declaration of Conformity**

Hereby frogblue AG, Luxemburger Str. 6, 67657 Kaiserslautern, declares that this device is in compliance with the essential requirements and other relevant provisions of directive

2014/53/EU	Radio Equipment Directive
2011/65/EU	RoHS Directive

The declaration of conformity is available at www.frogblue.com