frogblue

EN | Operating instructions

frogblue Input

frogIn5-AC

I5-AC.01



5-channel input

Intended use

Multi-functional 5-channel input to monitor buttons and switches (110-240 V~). With comfort and timer functions.

For installation in flush-mounted box according to DIN 49073. (For installation behind a switch insert a flush-mounted box depth of minimum 53 mm is necessary, otherwise single mounting is required.)

Safety information

Electrical equipment may only be installed and fitted by qualified electricians.


Failure to observe the instructions may cause damage to the device and result in fire and other hazards!

Danger of electric shock. Disconnect the power supply and switch off the circuit breakers before beginning work on the device.

Country-specific regulations must be observed.

These instructions are an integral part of the product and must remain with the end customer.

Device setup

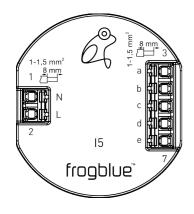

L/N: Mains supply connection

- a: Input 1
- b: Input 2
- c: Input 3
- d: Input 4
- e: Input 5

Function

System information

This device is a product of the frogblue system. Detailed technical expertise obtained through frogblue training sessions is required.

The functionality of this device depends on the software. Detailed information regarding software versions and the respective range of functions can be found on the frogblue website.

Technical descriptions, further detailed instructions and information for proper disposal are available in the manual on the frogblue website at all times.

Commissioning and configuration are performed using the frogblue app.

Product characteristics:

- Configurable inputs
- Power supply via mains power cable, no additional cabling required between frogblue modules

Information for qualified electricians


Fitting and electrical connection

DANGER! Electric shock if live parts are touched.

Electric shocks can be fatal.

Before working on the device, disconnect the power supply and cover live parts in the working environment!

Connect and install the device

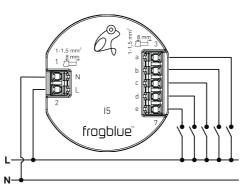

Stripping length



Ø 1 ... 1,5 mm²; rigid conductors recommended

Connecting wires



push conductor completely in terminal

Disconnecting wires

1.

2.



push and hold release button with screwdriver (size 3) pull wire

repeat the process with each wire

Technical data

Rated voltage	AC 110-240 V~
Mains frequency	50 / 60 Hz
Inputs	5; 110-240 V~
Bluetooth	Bluetooth 4.2 Low Energy
Frequency range	2400 MHz – 2483.5 MHz, max. 3.4 dBm
Ambient temperature	-25 +65 °C
Storage/transport tem	nperature -25 +70 °C
Dimensions (LxWxH)	48 x 53 x 21 mm
Connection type	Spring plug-in terminal
Core cross-section	1 1.5 mm ²

Technical changes reserved.

Warranty

The warranty is subject to the statutory provisions relating to the specialist retailer.

Declaration of Conformity

Hereby frogblue AG, Luxemburger Str. 6, 67657 Kaiserslautern, declares that this device is in compliance with the essential requirements and other relevant provisions of directive

2014/53/EU	Radio Equipment Directive
2011/65/EU	RoHS Directive

The declaration of conformity is available at www.frogblue.com